

ANTI-LIFT

SECURITY SYSTEM


PARTS LIST



PUNCH



EYE BOLT

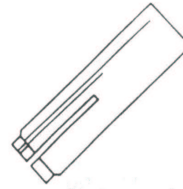

WEDGE ANCHOR



COVER

INSTALLATION INSTRUCTIONS

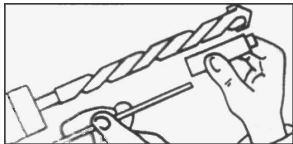


FIG.1

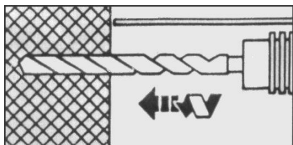


FIG.2

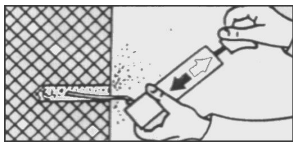


FIG.3

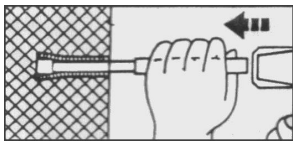


FIG.4

1. Set the drill depth to 70mm (Fig.1)
2. Drill a 20 mm diameter hole to the pre-set depth (Fig.2)
3. Remove dust and debris from hole (Fig.3)
4. Insert wedge anchor into hole with threads facing outwards (Fig.4)
5. Push the anchor to the bottom of the hole using the large end of the punch, a light tap with a hammer will ensure this condition.
6. Remove the punch and re-insert with the small end so that it rests inside the anchor.
7. Several sharp blows with a hammer to the punch will set the expansion wedge. A solid feel to the blows with no 'give' will indicate that the anchor is fully set.
8. Thread the security eye bolt into the wedge anchor and hand tighten only. No extra pressure is required.

PLEASE ENSURE YOU DO NOT ...

1. Use incorrect diameter, length or type of drill bit.
2. Drill oversize and too deep.
3. Continue an installation with an incorrectly expanded anchor.
4. Over tighten or use excessive leverage on the eye bolt.